

Telephone operation

Operation	Steps
Making a call	Using a cordless handset: Press PHONE or /SPEAKER -> Enter the telephone number. Using the telephone base: Press /SPEAKER or lift the corded handset -> Enter the telephone number.
Answering a call	Using a cordless handset: Press PHONE or /SPEAKER , or press any dialing key (0-9 , TONE ✕ or #). Using the telephone base: Press /SPEAKER , or lift the corded handset.
Ending a call	Using a cordless handset: Press OFF or return the handset to the charger. Using the telephone base: Press /SPEAKER or hang up the corded handset.
Handset speakerphone	During a call, press /SPEAKER to switch between handsfree speakerphone and normal handset use.
Redial	Using a cordless handset: Press REDIAL repeatedly to select the desired entry -> PHONE or /SPEAKER to call. Using the telephone base: Press REDIAL repeatedly to select the desired entry -> press /SPEAKER or lift the corded handset to call.
Volume control	On the telephone base, press VOLUME▼ to decrease or press VOLUME▲ to increase the listening volume during a call. On a cordless handset, press ▼ or ▲ .
Call waiting (Requires subscription from telephone service provider)	Press FLASH on the handset or FLASH on the telephone base to put current call on hold and to take the new call; press again to switch back and forth between calls.

Caller ID

This product supports caller ID services offered by most telephone service providers. The telephone stores caller ID information of the last 50 incoming calls in the telephone base. This information is common to all devices.

Missed call indicator
When a handset or the telephone base is in idle mode and has new or missed calls, its screen shows XX Missed calls . You can erase the missed call indicator either by reviewing the call log one by one, or by <u>pressing and holding</u> CANCEL on the handset or CANCEL on the telephone base in idle mode.
Review and dial a number in the call log
1. CID in idle mode -> ▼ or ▲ to scroll through the list. 2. When the desired entry is displayed, press PHONE or /SPEAKER on the cordless handset to call. On the telephone base, lift the corded handset or press /SPEAKER to call.
Caller ID announce
When this feature is on and you have an incoming call, the handset and/or base speaks “ <i>Call from...</i> ” and the name of the caller based on the directory or caller ID information. You can turn this feature off for the base or each individual handset, or for all devices. 1. MENU -> ▼ or ▲ -> Settings -> SELECT . 2. ▼ or ▲ -> Caller ID annnc -> SELECT . 3. ▼ or ▲ to choose the desired option, then press MENU/SELECT . <ul style="list-style-type: none">Set all On/Off - Change the setting for the base and all handsets.Local handset - Change the setting for that handset only (when programming from a cordless handset only).Base - Change the setting for the telephone base only. 4. ▼ or ▲ to choose On or Off -> SELECT .

Directory

The directory can store up to 50 entries, which are shared by all system devices.

Operation	Steps
Adding an entry	1. MENU . 2. ▼ or ▲ -> Directory -> SELECT . 3. ▼ or ▲ -> Add contact -> SELECT . 4. Enter a telephone number up to 30 digits -> SELECT . 5. Enter a name up to 15 characters -> SELECT .
Searching/dialing an entry	1. DIR in idle mode. 2. Press ▼ or ▲ to browse through the directory, or press the dialing keys (0-9) to start a name search. 3. Press PHONE or /SPEAKER on a handset to call. -OR- On the telephone base, press /SPEAKER or lift the corded handset to call.

Answering system

About answering system and voicemail
Your telephone has separate indicators for two different types of voice messages: those left on the built-in answering system and those left at your telephone service provider’s voicemail. To listen to messages recorded on the built-in answering system, refer to the Message playback section on the next page; to listen to voicemail, contact your telephone service provider for more information.
Turn answering system on/off
The answering system must be turned on to answer and record messages. Using a cordless handset: 1. MENU . 2. ▼ or ▲ --> Answering sys --> SELECT . 3. ▼ or ▲ --> Answer ON/OFF --> SELECT . 4. ▼ or ▲ --> On or Off --> SELECT . When the answering system is on, the handset shows ANS ON . Using the telephone base: <ul style="list-style-type: none">Press /ANSWER ON/OFF to turn the answering system on or off. If the answering system is turned on, it announces, “<i>Calls will be answered.</i>” If the answering system is turned off, it announces, “<i>Calls will not be answered.</i>”
Message alert tone
When this feature is on, and there is at least one new message, the telephone base beeps every 10 seconds. Using a cordless handset or the telephone base: 1. MENU -> ▼ or ▲ -> Answering sys -> SELECT . 2. ▼ or ▲ -> Ans sys setup -> SELECT . 3. ▼ or ▲ -> Msg alert tone -> SELECT . 4. ▼ or ▲ -> On or Off -> SELECT .
Call screening
Use this feature to choose whether incoming messages can be heard over at telephone base when they are being recorded. If you turn call screening on, you hear the incoming message. While monitoring an incoming message, you can answer the call by pressing PHONE on the handset, or pressing /SPEAKER or lifting the corded handset on the telephone base. Using a cordless handset or the telephone base: 1. MENU -> ▼ or ▲ -> Answering sys -> SELECT . 2. ▼ or ▲ -> Ans sys setup -> SELECT . 3. SELECT to select Call screening . 4. ▼ or ▲ -> choose On or Off -> SELECT .

Answering system (continued)

Message playback

Using the telephone base:

Press ►/■/PLAY when the telephone base is in idle mode. If there are only new or only old messages, they are played automatically. If there are both old and new messages, press ▼ or ▲ --> **Play new msgs** or **Play old msgs** --> **SELECT**.

Using a cordless handset:

Press **MENU** twice when the handset is in idle mode. If there are only new or only old messages, they are played automatically. If there are both old and new messages, press ▼ or ▲ --> **Play new msgs** or **Play old msgs** --> **SELECT**.

Options during playback

Feature	On the telephone base	On a handset
Adjust playback volume	Press ▼/VOL/▲	Press ▼VOLUME or ▲VOLUME
Stop playback	Press ►/■/STOP	Press 5
Skip to the next message	Press ►/SKIP	Press 6
Repeat the message	Press ◀/REPEAT	Press 4
Play the previous message	Press ◀/REPEAT twice	Press 4 twice
Delete the message	Press X/DELETE	Press DELETE

For more detailed instructions, please refer to the Abridged user’s manual provided in your package, or for a full set of installation and operation instructions, refer to the online **CL84102/CL84152/CL84202/CL84252/CL84342/CL84352 DECT 6.0 corded/cordless telephone/answering system with caller ID/call waiting** Complete user’s manual at **www.telephones.att.com/manuals**.

For customer service or product information, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.